


# Steam cleaner

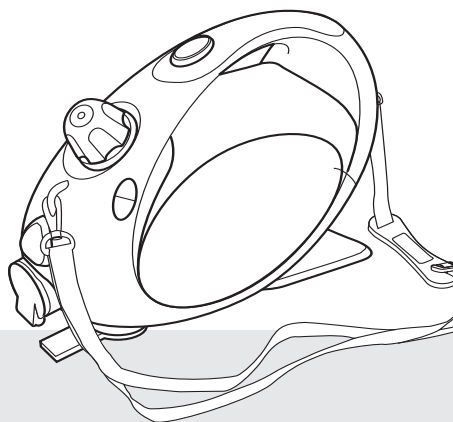

Please read and keep these instructions



## Quick start

- 1** Fill the tank up to a maximum of 0.75 litres of water (using warm water will reduce the heat-up time). Screw cap on and tighten fully.
- 2** Attach the hose and required accessories.
- 3** Connect to the power supply.
- 4** Press the on/off button to start heat-up. When green light turns off, the steam is ready.
- 5** Press the trigger on the handle to release the steam.
- 6** Aim the steam safely: at the start water may be ejected. Hold over a sink or bucket until excess water has cleared.

## Descaling

Descale regularly, do not wait for a problem to occur. In very hard water areas we recommend using distilled water.



# Important safety instructions

---

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

**WARNING: Danger to the person!**

**IMPORTANT:** Damage to the appliance!

In addition we offer the following safety advice.

## Location

---

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

## Children

---

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

## Personal safety

---

- The plug must be removed from the wall socket before cleaning, filling the boiler or maintaining the appliance.
- To protect against fire, electric shock and personal injury do not immerse cord, plug or cleaner in water or other liquid.
- Do not discharge the steam towards people. Danger of scalding.
- Never touch the plug or cable with wet hands.
- Never modify the cleaner in any way.
- When using the machine always keep it horizontal.
- Steam must not be directed towards equipment containing electrical components, such as the interior of ovens.

## Other safety considerations

---

- Do not use any chemical detergents, perfumes, alcohol etc in the water.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Morphy Richards spare parts and accessories.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact Morphy Richards using the replacement parts number on the front of this leaflet.
- The appliance must never be left running when unsupervised.
- This steam cleaner is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

# Electrical requirements

---

Check that the voltage on the rating plate of your unit corresponds with your house electricity which must be A.C. (alternating current).


If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

**WARNING: This appliance must be earthed.**

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.

When using this appliance outdoors it should be additionally protected by a RCCB (Residual Current Circuit Breaker).

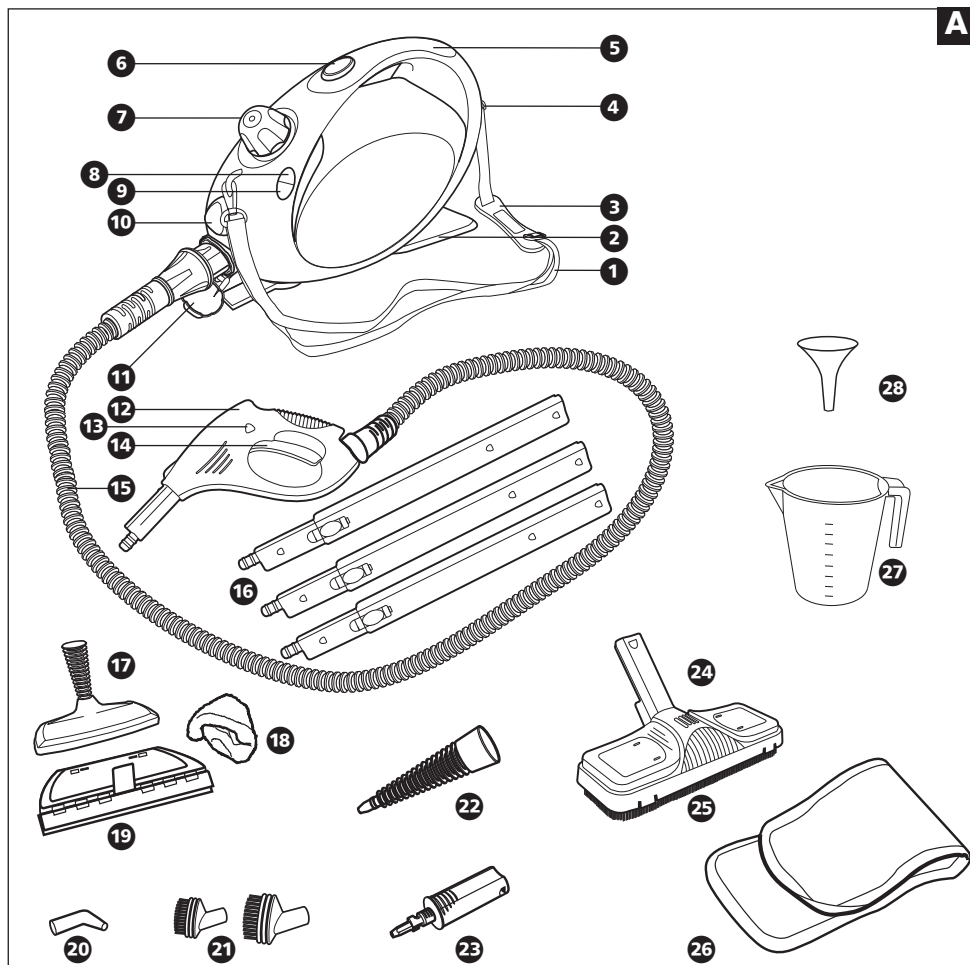

## Features

- ① Shoulder strap
- ② Cord storage foot
- ③ Strap length adjuster
- ④ Strap hooks x 2
- ⑤ Carrying handle
- ⑥ On/off switch
- ⑦ Filler cap
- ⑧ Power light
- ⑨ Thermostat indicator light
- ⑩ Hose release button
- ⑪ Hose inlet and flap
- ⑫ Hose handle
- ⑬ Trigger lock button
- ⑭ Steam trigger
- ⑮ Hose

## Accessories


- ⑮ Extension tubes x 3
- ⑰ Upholstery nozzle
- ⑱ Cloth cap for upholstery nozzle
- ⑲ Window squeegee attachment
- ⑳ Angled nozzle
- ㉑ Small and large plastic brushes
- ㉒ Jet nozzle
- ㉓ Jet nozzle adaptor
- ㉔ Elbow attachment (shown attached to floor nozzle)
- ㉕ Floor nozzle
- ㉖ Cotton towel
- ㉗ Measuring jug
- ㉘ Funnel

# Fitting the strap

Clip the shoulder strap **1** to the two hooks **4** and adjust for comfort by sliding the strap length adjuster **3**.


# Fitting the hose

Pull the hose inlet flap **11** down, line up the locating keyway on the plug with the socket and push the hose connector firmly and fully into the cleaner socket **13**.

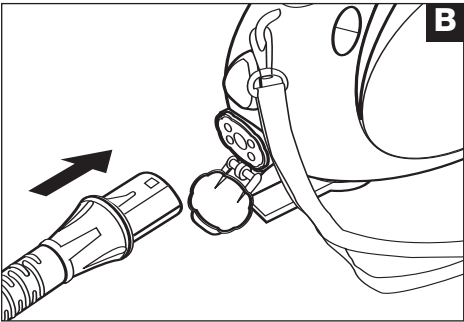

# Quick accessory assembly guide

Please refer to the accessory assembly section for full descriptions on how to attach tubes and nozzles.

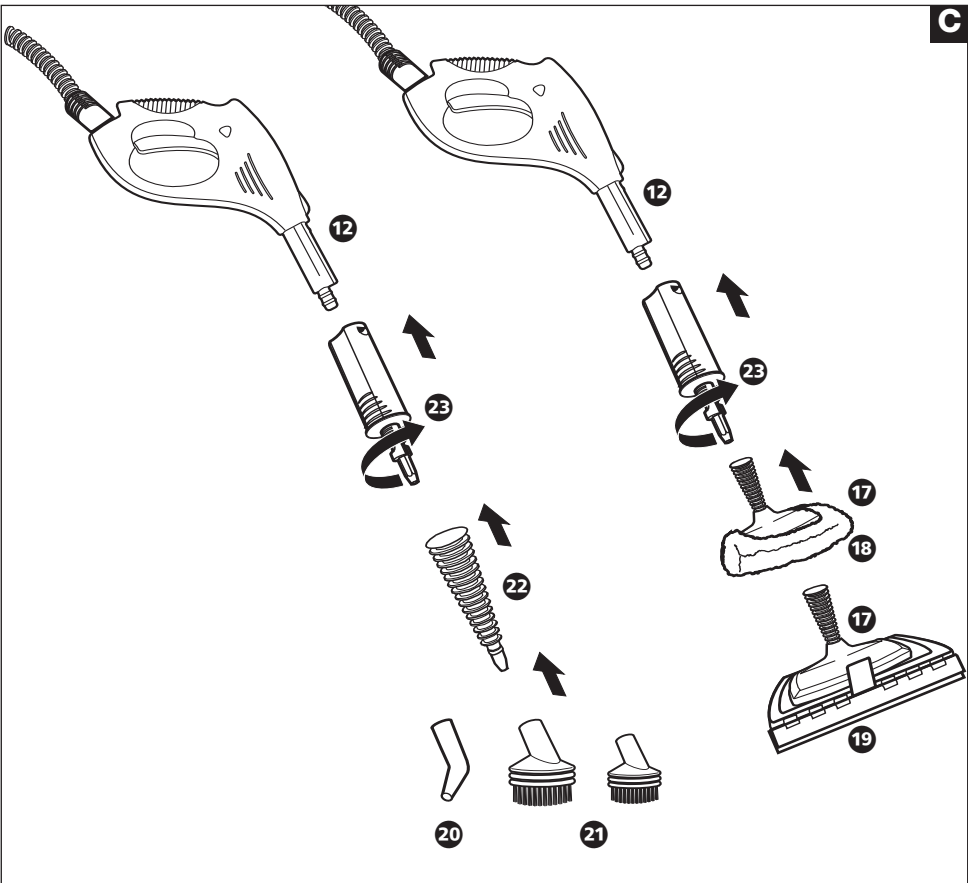

# Using

**IMPORTANT:** Please remember that the steam cleaner operates by emitting steam at an increased temperature of 130°C. Never use it on objects or surfaces which cannot resist this temperature, delicate materials, dralon, plastic, natural fur etc. Where any doubt exists check carefully on a part of the material where minor marks will not matter.

## Filling the boiler

Ensure the cleaner is unplugged from the mains supply before filling or re-filling.

- 1 Unscrew the filler cap **7** by turning anti-clockwise **D**.
- 2 Fill the boiler with a maximum of 0.75 litres of water by using the jug and funnel provided **E**. Warm water may be used which will reduce the heat-up time. Do not use any detergent. **IMPORTANT:** The use of any other fluids can be dangerous and can lead to damage of the heating element.
- 3 Refit the filler cap and fully tighten by turning clockwise.

The filler cap has a safety device which

prevents the filler cap being undone when there is steam pressure in the tank. This is shown by a red safety indicator which pushes out when there is steam pressure inside the tank and goes back in again when it is safe to refill.





## Re-filling the boiler

**WARNING: Always switch off, unplug from the mains supply and release all steam before opening and removing the filler cap.**

- 1 Release the steam pressure by pressing the steam trigger **14** on the handle until all the steam has been expelled **F**. Leave the cleaner to cool down for a few minutes.
- 2 Fill the boiler as previously.
  - Use warm water to reduce the risk of spitting.

## Boil dry cut-out

If the cleaner has boiled dry, switch it off for a few minutes to allow the safety cut-out to reset.

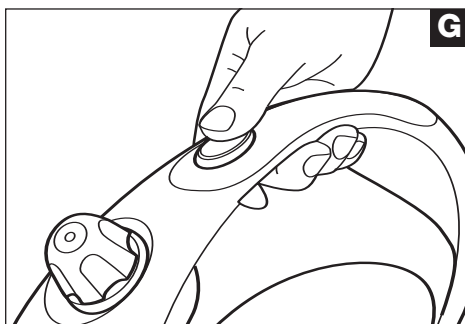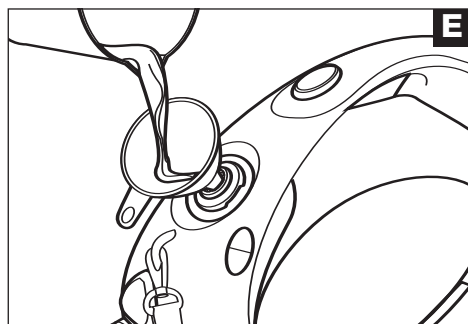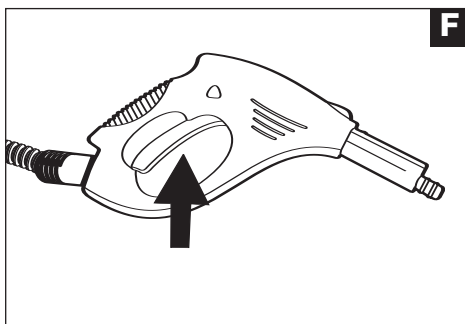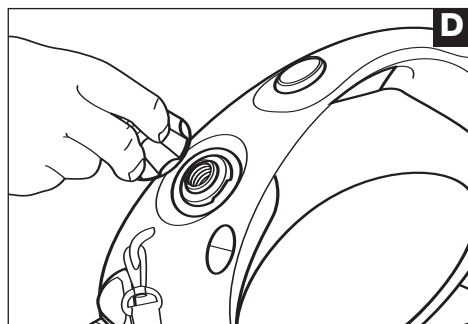

## Switching on

- 1 Insert the plug into the power socket.
- 2 Switch the cleaner on by pressing the on/off switch **6** to 'on' **4**. The red power indicator light **8** and the green thermostat indicator light **9** will illuminate. It will take approximately five minutes to reach the correct temperature.
- 3 When the correct temperature has been reached the green thermostat indicator light will go out. The steam cleaner is now ready to use.

The green thermostat indicator light will cycle on-and-off during operation to show that the cleaner is maintaining the correct temperature.

**WARNING: To avoid injury, the cleaner should be switched off during breaks or pauses of work. For extra safety apply the trigger safety lock.**

If you leave the working area, please switch the cleaner off and unplug.

## Steam cleaning

- 1 Ensure the safety lock **13** is off. Push the lock from the left side to lock the trigger and push from the right to release the lock **11**.
- 2 Press the steam trigger **14** and steam will be emitted from the nozzle. Direct the steam at a cloth or into a bucket or sink until the steam is emitted evenly.

**WARNING: At the start hot water may be ejected.**

**WARNING: Aim the steam safely.**

- 3 Keep the steam trigger pressed and direct the steam at the surface to be cleaned, removing the dirt by moving the steam jet backwards and forwards over the area.

- 4 To stop the steam jet, release the steam trigger.

**IMPORTANT:** Do not hold the steam jet concentrated in one place for too long.




- To control the steam temperature and the cleaning power move the handle closer to or further away from the surface being cleaned.

## Accessories

**WARNING: Unplug the cleaner and allow to cool before fitting or changing attachments as they become hot during use.**

Attach the desired accessory to the hose handle **12**. Extension tubes can be attached to the handle for extra reach.

- 1 Push the extension tubes **15** onto the handle connection nozzle as far as they will go until you hear a click **1**.
- Some tasks may be easier with only one tube fitted or none at all.
- 2 To connect the desired accessory directly to the hose handle, slide the handle into the accessory head or tube until it locks in place **13**.

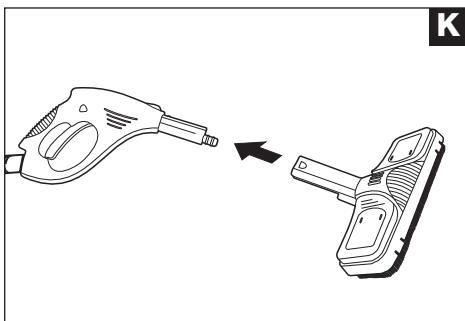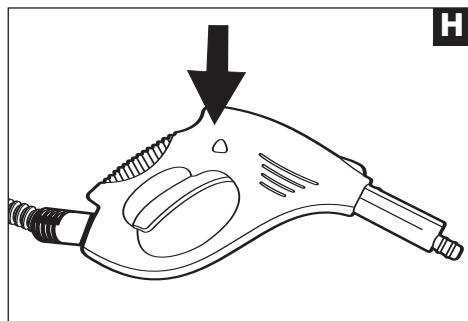
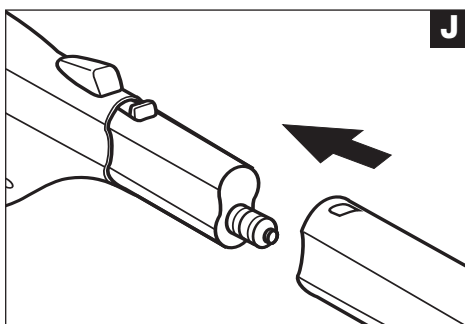


## Floor nozzle 25

The floor nozzle is used for the cleaning of large, washable walls and floor areas. The floor nozzle can be used with or without the cotton towel 26.

- Sensitive surfaces, wood, linoleum etc. should be used with the cloth.
- 1 Fit the elbow attachment 24 to the floor nozzle and twist 1/2 a turn **L**.
  - 2 Fit the floor nozzle to the extension tube or handle **M**.
  - 3 To fit the cloth to the floor nozzle pull the cloth under the clips on both sides. Extra cloths can be ordered through our helpline. Alternatively any strong, uncoloured cotton cloths may be used **N**.
- The cleaning power of the cloth can be optimised by turning and changing the cleaning cloth regularly.
  - To clean very dirty areas, move the cleaning nozzle over the surface more slowly in order to increase the cleaning action of the steam.

**IMPORTANT:** The cleaner is not suitable for cleaning unsealed wooden floors, laminates, soft plastics or wooden furniture. If in doubt check with the flooring

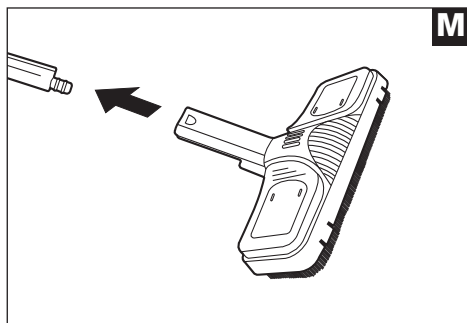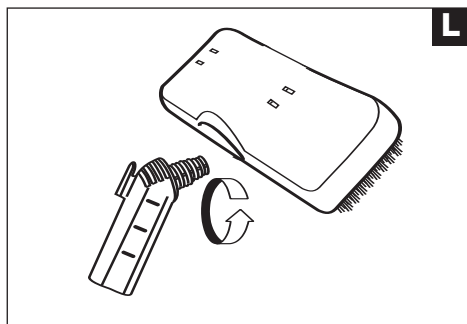




manufacturer.

## Accessory adaptor

- 1 Push the jet nozzle adaptor 23 as far as it will go onto the connection nozzle until you hear it click into place **O**.
- 2 The jet nozzle adaptor can be removed again by pressing the accessory connection button to release it.

## Jet nozzle 22

- 1 Push the jet nozzle directly onto the jet nozzle adaptor and turn in a clockwise direction to lock into place **P**.

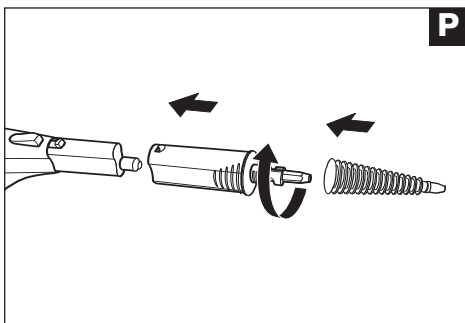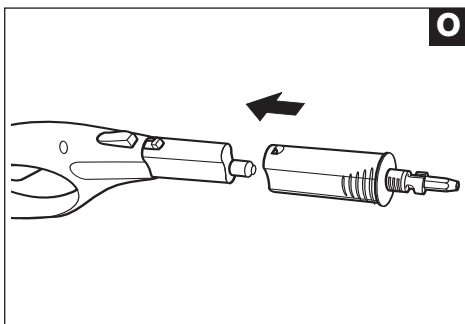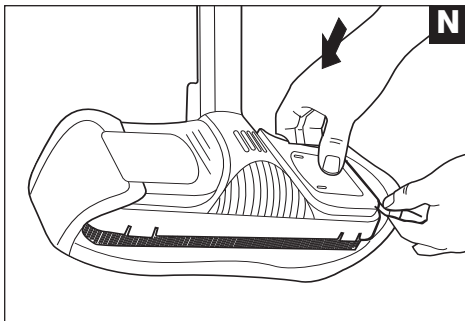

- 2 It can be used with various fittings, eg the angled nozzle and small and large brush attachments, depending on the task.
- The jet nozzle can be used with various fittings for cleaning inaccessible areas such as corners, joints, blinds, radiators and toilets as well as various surfaces such as stainless steel, windows, mirrors, enamelled surfaces and also for stain removal.



## Brush attachments 21

- 1 Choose the desired attachment for the task **Q**.
- 2 Fit the brush attachment onto the jet nozzle by pushing on.
- 3 Pull to remove.

IMPORTANT: Always test a hidden area before using steam on any surface.

## Upholstery attachment 17

- 1 Fit the rectangular upholstery steam nozzle to the jet nozzle adaptor by pushing on and turning clockwise to lock **R**.
- 2 This nozzle can be used with or without the cotton cover **18**.

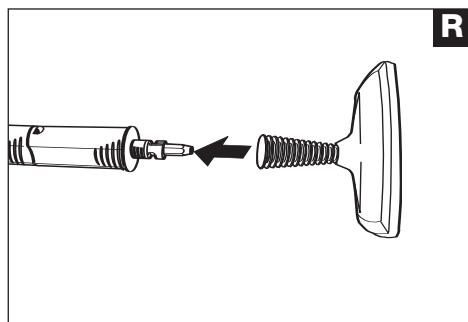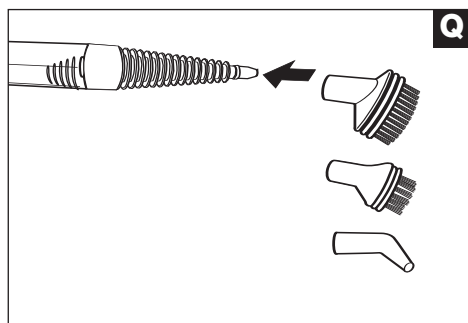

- 3 Turn anti-clockwise and pull to remove.
- This nozzle is ideal for cleaning cushions, carpets and car seats.



IMPORTANT: Always test on a hidden area before you start. Steam cleaning may not be suitable for certain fabrics such as dralon due to the high temperature of the steam.

## Window squeegee attachment 19

- 1 Locate the window squeegee onto the two tabs at the bottom of the upholstery nozzle. Then push the top of the squeegee until the clip goes over the top of the upholstery nozzle **S**.

- This attachment is ideal for cleaning windows, mirrors, ceramic tiles and other non porous smooth surfaces.
- Apply the steam evenly to the glass surface from a distance of 10-15 cm. Then switch the steam off and wipe the moisture off the glass from top to bottom using the rubber squeegee. Wipe the rubber squeegee and the lower edge of the window. Dry after every strip.

IMPORTANT: Glass surfaces can be shattered by the sudden application of excessive heat. Warm glass surfaces first

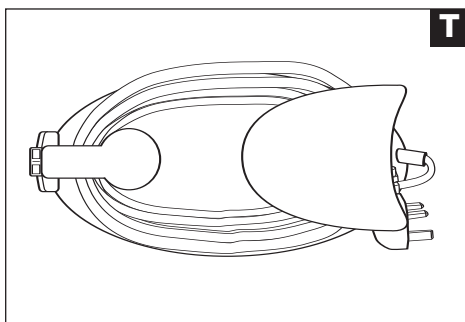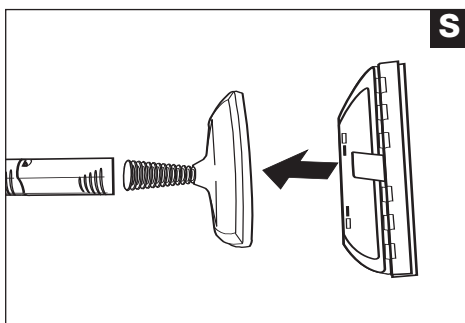



from a distance of 20-25 cm. Continue at a distance of 10-15 cm.

## Cord storage

With the cleaner upside down, wrap the cord around the cord storage foot **2** and cord storage release lever **1**. For quick release of the cable rotate the spring loaded cord storage release lever.

## After use

- 1 Switch the cleaner off and unplug from the socket. Wait until the cleaner has cooled down completely.
- 2 Release any steam pressure by pressing the steam trigger on the handle.
- 3 Apply the steam safety lock.
- 4 Remove the filler cap.
- 5 Empty the water tank. Allow the inside of the water tank to dry out before replacing filler cap.
- 6 Remove the hose by pressing the hose release button **10**.

## Rinsing the water tank

To clean the water tank fill it with clean water and shake vigorously. This will release any limescale deposits that have collected on the bottom of the tank. Pour the water out by holding upside down.

## Descaling

In order to prolong the life of your cleaner you should descale the steam tank at least every 6 months.

- 1 Switch the cleaner off, unplug and allow to cool.
- 2 Empty any water out of the tank.
- 3 Mix the descaler in the measuring jug using warm water. We recommend using 50gm of citric acid crystals per 1 litre of water. Citric acid crystals are available from most pharmacies.
- 4 Pour 0.75 litres of the descaler solution

into the tank.

- 5 Fit the cap and tighten fully.
- 6 Using the handle, move the steam cleaner about to swirl the solution around the tank.
- 7 Leave for 30 minutes.
- 8 Empty the solution carefully.
- 9 Rinse the tank with clean warm water, then empty.
- 10 Wipe the outside of the cleaner with a damp cloth to remove all traces of descaler solution.

**Warning: Do not switch on the cleaner with the descaling solution inside.**

## Care and maintenance

Your cleaner is manufactured to withstand normal day-to-day use, but an occasional wipe over with a damp cloth will help maintain its good looks. Abrasive cleaners should not be used.

## Purchasing parts

Use original parts. Replacement parts can be purchased from specialist retailers. If you have difficulty, call the helpline number .

## Helpline

If you have any difficulty with your appliance do not hesitate to call us. We are likely to be more help than the store from where it was bought.

Please have the following information ready to enable our staff to help you.



- Name of product
- Model number as shown on the underside of the appliance.

## Your two-year guarantee

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact Morphy Richards quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.

Subject to the exclusions set out below (1-6) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2-year guarantee the appliance must have been used according to the manufacturers instructions. For example, appliances must have been descaled and filters must have been kept clean as instructed.

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 The guarantee excludes consumables such as bags, filters and glass carafes.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This

guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

*Morphy Richards products are intended for household use only*

*Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.*

**morphy richards®**

The After Sales Division,  
Morphy Richards Ltd, Mexborough,  
South Yorkshire, England, S64 8AJ

**Helpline** (office hours)

UK 08450 777700

Republic of Ireland 1800 409119